


# TEMPERATURE MONITORING ONLINE

---

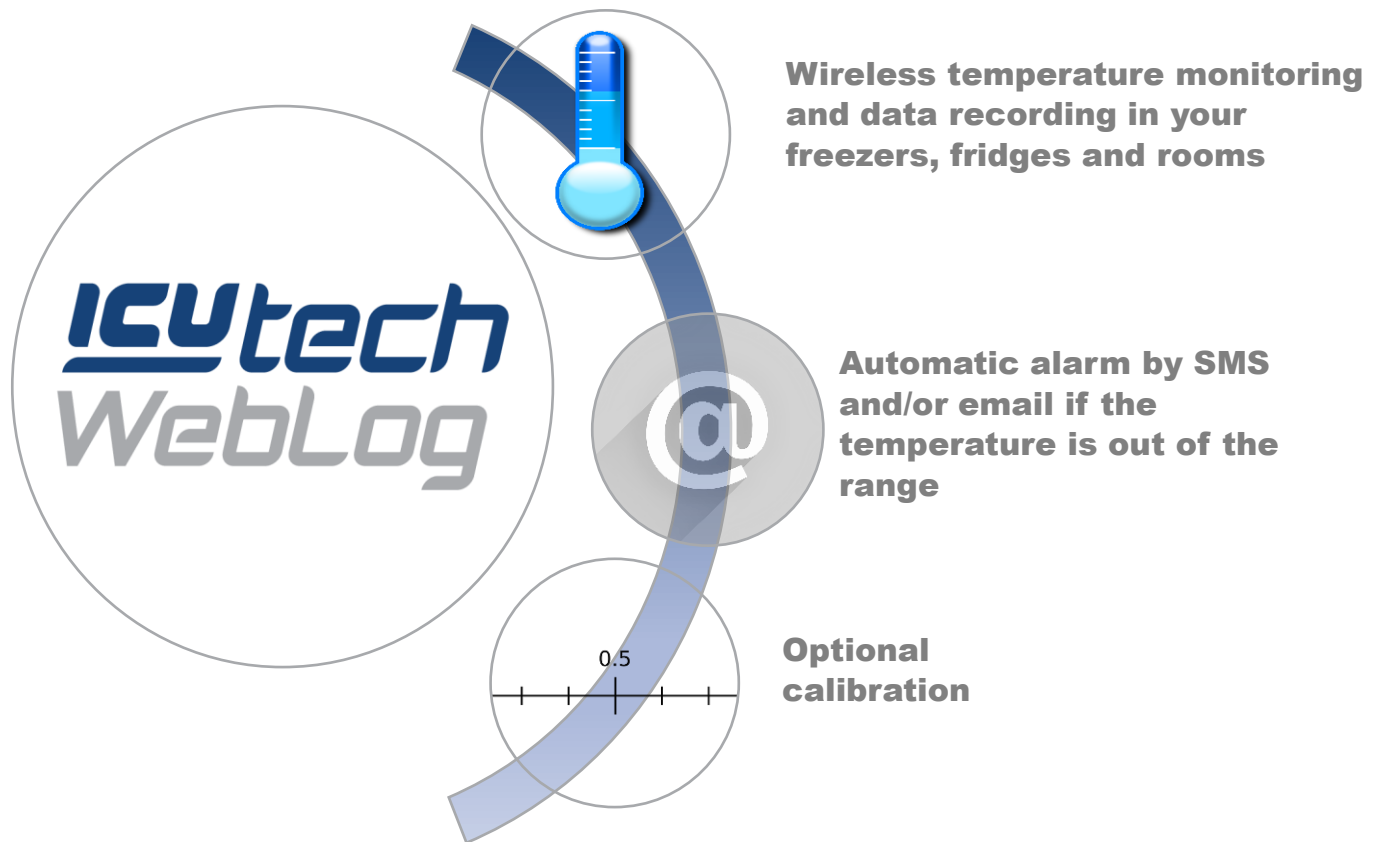


## ADVANTAGES

- **easy installation by user**
- **no investment costs, just rental costs**
- **automatic documentation and data backup**
- **predefined PDF reports by e-mail daily, weekly or monthly**
- **6 years history available**
- **free replacement in case of defect**
- **other types of sensors available**
- **support**



# ICUtech WebLog

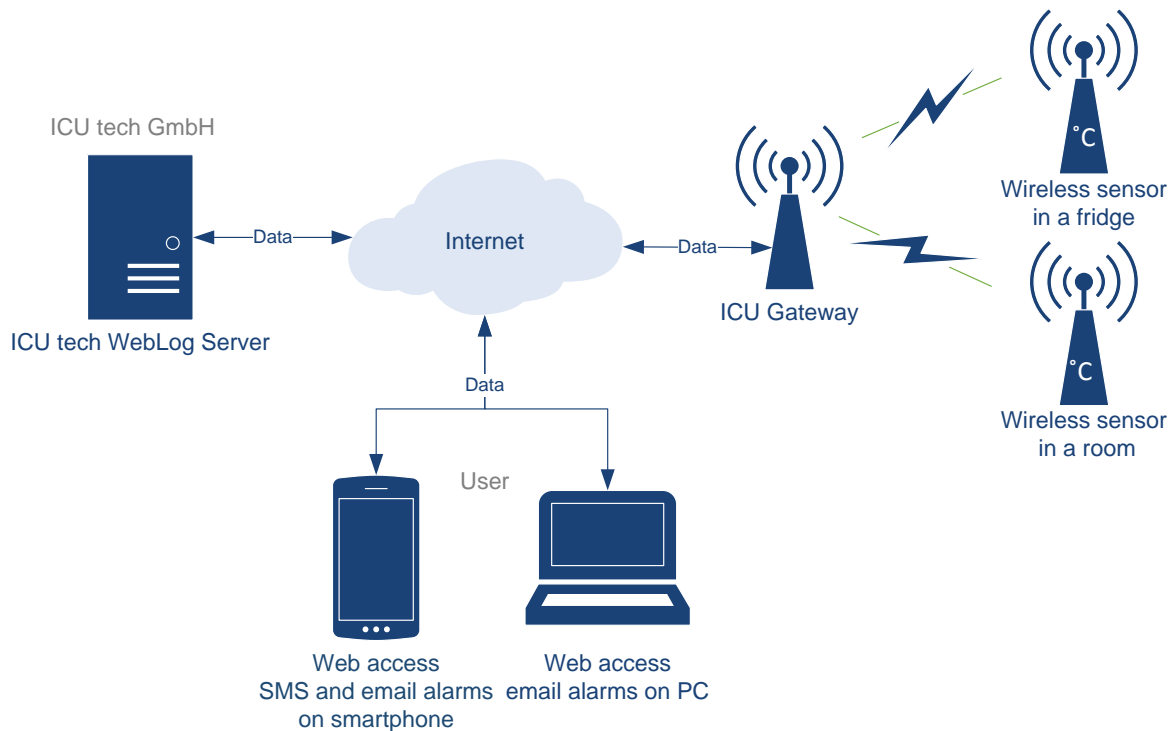

The equipment installation is simple. The customer has to connect the ICU gateway to mains and a network with internet access and then place the sensors in their measuring locations. The user accesses the system via web browser so no software installation is needed. The temperature readings are sent over radio to the ICU gateway, and then via LAN or WLAN to WebLog server hosted by ICU tech. ICU tech WebLog monitors each measuring point basing on its user-defined limits. If a reading is outside of limits, an alarm is sent by email and/or SMS to a user. If the user does not handle the alarm, it is sent again after 24 hours.

## Web interface

The web interface shows alarm status and temperature charts and lets the user to accept the alarms and generate reports.



ICU tech WebLog is a product, which makes your work easier and gives you the quality you need.